



ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

97-29437

- D - Ignition/Starter Switch
- F4 - Back-Up Light Switch
- F125 - Multi-Function Transmission Range (TR) Switch
- H15 - Warning buzzer for parking
- J446 - Control module for parking aid
- S9 - Fuse
- S10 - Fuse
- T3m - 3-Pin Connector, brown, connector station A-pillar, right
- T3s - 3-Pin Connector, red, on protective housing for control module, in engine compartment, left
- T15c - 15-Pin Connector, red, connector station A-pillar, right
- T16h - 16-Pin Connector, on Control module for parking aid

- 500 - Threaded connection -1- (30) on the relay plate
- A2 - plus connection (15), in instrument panel wiring harness
- A52 - Plus Connection 2 (30) (in instrument panel wiring harness)
- A87 - Connector (reverse lamp), in instrument panel wiring harness
- A98 - Plus connector -4- (30), in instrument panel wiring harness
- A145 - Plus Connection 4 (15) (in instrument panel wiring harness)
- * manual transmission only
- ** automatic transmission only